

Installation Instructions

B134

For Gallery Sconce 21-7651F

Page 1 of 3

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician.

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

For fixtures requiring assembly, please refer to assembly instructions before installation.

Please Note: This fixture is designed to be mounted on a standard wall surface and may not be suitable for all applications. If installing in a non-wood frame application, we recommend consulting a qualified builder or electrician.


To Prepare to Install (Figure 1)

Component Parts

- A Fixture
- B Screws (4)

Caution: Be sure power is off at the main breaker box prior to installation.

1. Carefully unpack the fixture from the carton.
2. Remove four screws (B) from front of fixture to release wall mounting bracket and discard screws.

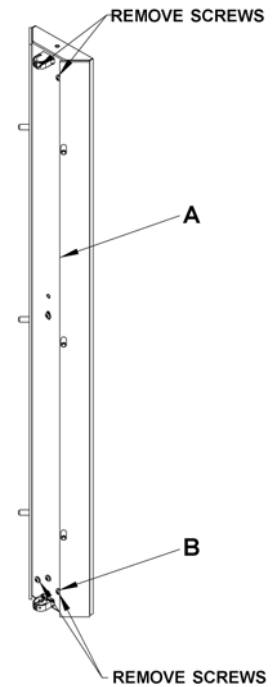

(Figure 1)

To Install Wall Mounting Bracket (Figure 2)

Component Parts


- C Wall Mounting Bracket
- D Anchors (6)
- E #10 Screws (6)

1. Place the wall mounting bracket (C) over the electrical box using the center hole provided being sure to hold it plum and level. With a pencil, mark the location of all mounting holes in the wall mount bracket on the wall behind.

IMPORTANT: Wall mounting bracket must be secured to a solid framing member in at least four locations. Do not depend on drywall anchors alone to support this fixture. If in doubt, contact a qualified electrician.

Set aside the wall mounting bracket and drill 1/4" holes in the locations marked on the wall. For holes using anchors, place the tapered end of the anchors (D) into the holes and gently tap them flush to the wall using a light weight hammer.

2. Thread the wires in the electrical box through the hole in the wall mounting bracket (C) while moving the bracket into position. Using the 1" #10 screws (E), screw the bracket securely to the wall. Be careful not to over-tighten or strip the anchors.

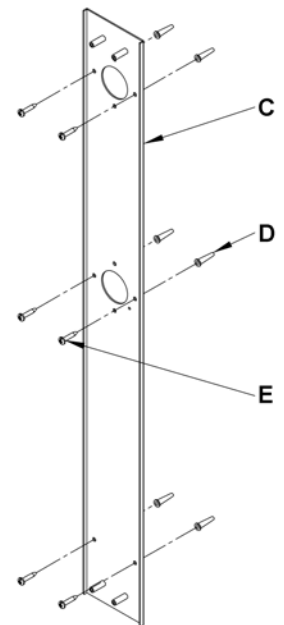

(Figure 2)

(continued)

Installation Instructions

For Gallery Sconce 21-7651F

B134


Page 2 of 3

To Install Fixture (Figure 3)

Component Parts

- C Wall Mounting Bracket
- F Fixture Can Assembly
- G Ground Screw
- H Cupped Washer
- I Threaded Standoff (4)
- J #8 Screws (4)

1. Hold the fixture can assembly (F) close to the wall mounting bracket (C) and using suitable wire connectors (not provided), connect fixture wires to supply wires (white to white, black to black, and bare copper or green to bare copper or green). Ground the mounting bracket using the ground screw (G) mounted to the wall mounting bracket (C).
Caution: Make sure wire connectors are twisted on securely, and no bare wires are exposed.
2. Carefully tuck all wires behind the fixture can assembly (F) and inside the wall mounting bracket (C) and place the fixture over the bracket so the holes in the top and bottom match the threaded standoffs (I) protruding from the wall mounting bracket (C). Secure the fixture by threading the #8 screws (J) through the holes in the fixture can assembly (F) and into the wall mounting bracket (B).
3. Refer to acrylic and front mounting instructions to complete installation.

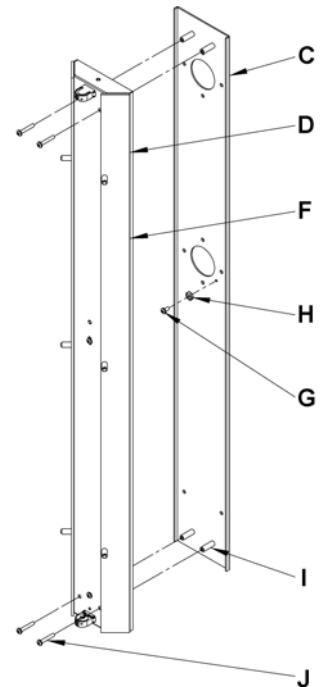

(Figure 3)

To Install Acrylic and Complete Fixture Installation (Figures 4 & 5)

Component Parts

- F Fixture Can Assembly
- K Fixture Front Panel
- L Acrylic Panel
- M Ball Head Screw (2)
- N Magnet Assembly (6)

1. Remove protective covering from acrylic panel (L). *Some colors might not have a protective covering.*
2. Slide acrylic panel (L) in opening on top of fixture front panel (K). Dull side should be facing the inside of the fixture. Slide acrylic through until it rests at bottom of fixture front panel (K). Acrylic should be approximately 1/8" below top surface when installed.
3. Install light bulb.
4. Align holes on the top and bottom of fixture front panel (K) with the holes in the top and bottom of fixture can assembly (F). Slide the fixture front panel (K) back until it bottoms out on magnet assembly (N).
5. If magnet assemblies (N) are not touching at all points it might be necessary to adjust them out by turning them on the threaded stud until they touch the fixture front panel (K).
6. Thread ball head screw (M) in top and bottom of fixture can assembly (F). Tighten both ball head screws (M) to secure fixture front panel (K).
7. Restore electricity at main breaker box.


(continued)

Installation Instructions


For Gallery Sconce 21-7651F

B134

Page 3 of 3

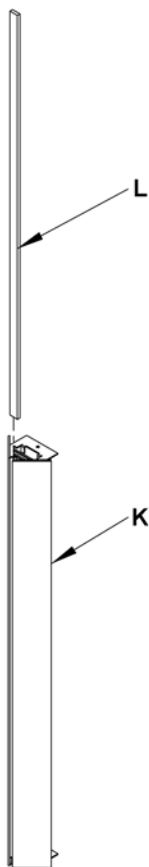

(Figure 4)

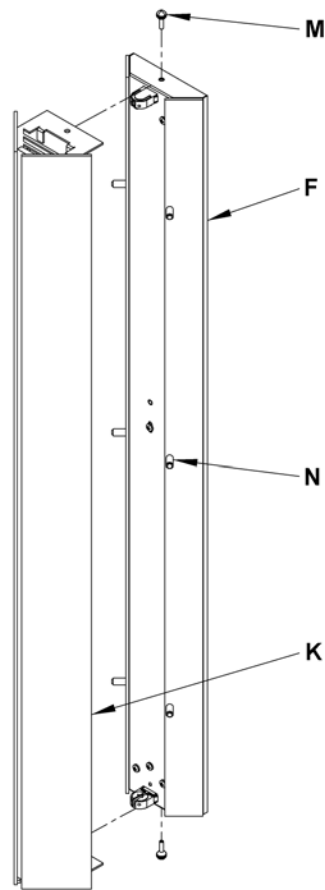

(Figure 5)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.