

Installation Instructions

Mobius Sconce 28-9450

B235

Page 1 of 6

CAUTION: FAILURE TO INSTALL THIS PRODUCT PROPERLY MAY RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE. We recommend installation by a qualified individual trained in the building trade.

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*


Please Note: This fixture is designed to be mounted on a standard wall surface and may not be suitable for all applications. If installing in a non-wood frame application, we recommend consulting a qualified builder or electrician.

To Install to Wall

Component Parts

| | | | |
|---|------------------|---|----------------------|
| A | Fixture Pipe | E | Set Screw (2) |
| B | Knurled Screw | F | Wall Mount Plate (2) |
| C | Locking Collar | G | #8 Screws (4) |
| D | Mounting Arm (2) | H | Cord |

1. Carefully unpack the fixture from the carton.
2. Slide locking collar (C), O-ring, and mounting arms (D) onto the fixture pipe (A).
Note: O-ring can easily slide through mounting arm (D) prior to installation. O-ring might need to be adjusted to proper location; between locking collar (C) and mounting arm (D).
3. Remove wall mount plate (F) from the mounting arm (D) by loosening set screw (E) and sliding wall mount plate (F) from mounting arm (D). Do this for both arms.
4. Hold the fixture in position level and plumb against the wall and mark the location of the mounting holes. Set fixture aside.
5. Attach wall mount plates (F) to the wall using silver #8 screws (G). Be careful not to over tighten the screws.
6. Slide the mounting arms (D) onto the wall mount plates (F) and secure with set screws (E).
7. Tighten knurled head screw (B) in locking collar (C) to secure the fixture pipe (A).
8. Plug the fixture's cord (H) into the supplied touch dimmer module, and plug the touch dimmer module into the wall.
9. Use steps below to install bulb and shade.

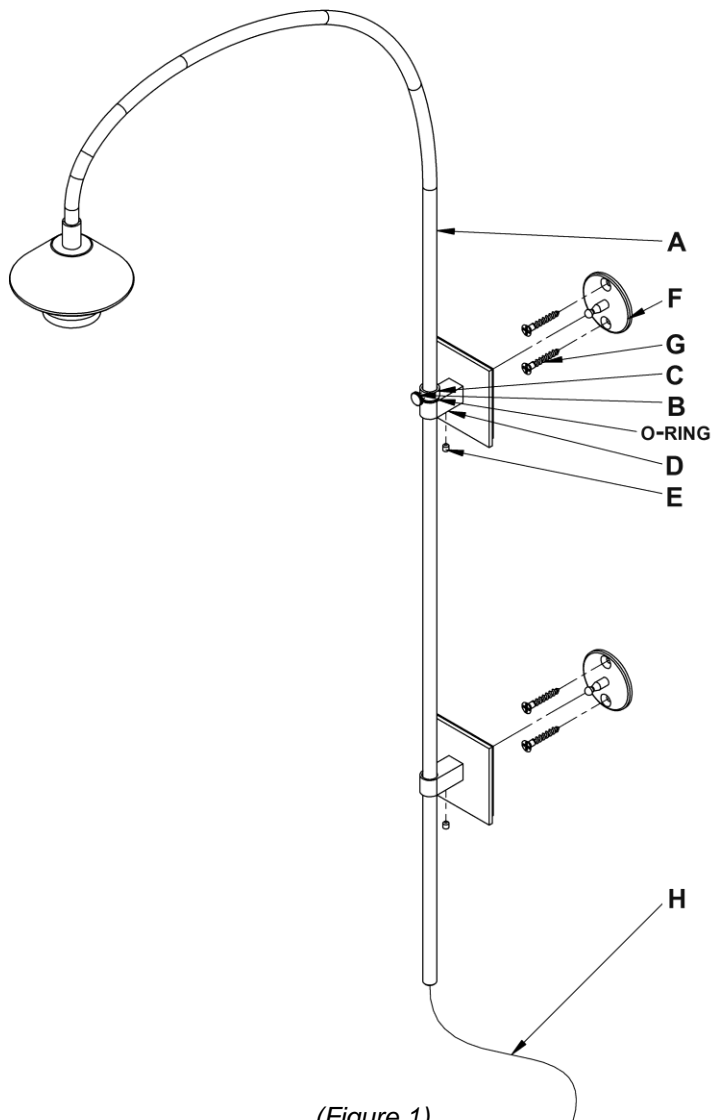

(Figure 1)


(continued)

To Assemble Flat Shades

Component Parts:


- I Flat Shade Panel (2)
- J Male End Plastic Button (8)
- K Female End Plastic Button (8)

Step 1 Identify all parts needed.

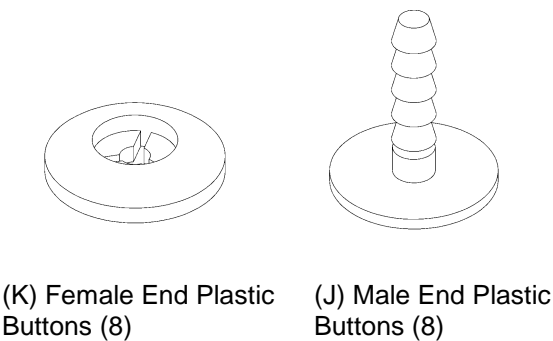

(K) Female End Plastic Buttons (8)

(J) Male End Plastic Buttons (8)

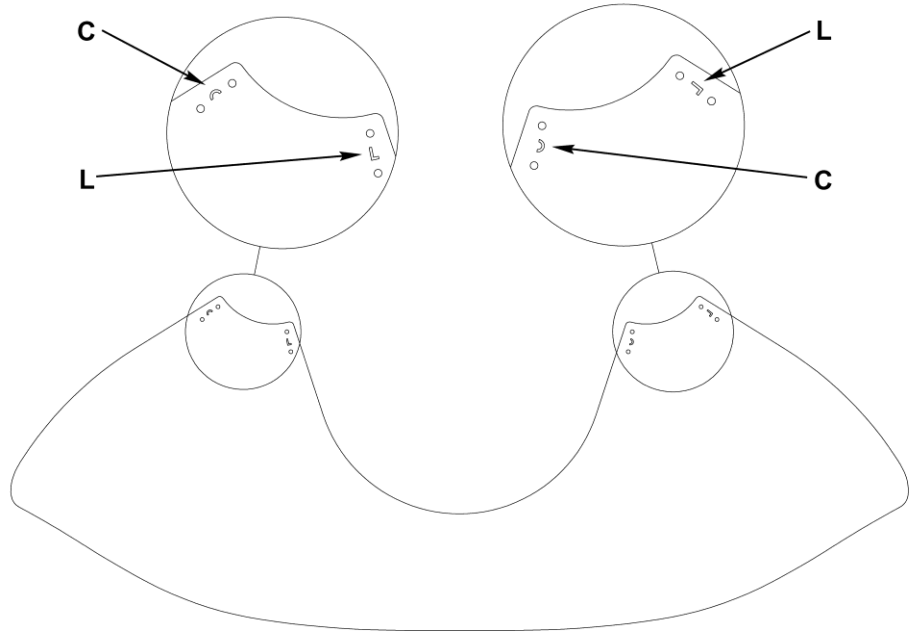

(I) Flat Shade Panel (2)

Step 2 Fold shade panel (I) over and align letter designations "L".
Note: Top letter "L" should be oriented the same as the bottom letter "L".

Step 3 Slip male end of plastic button down through bottom of shade panel as shown.



(continued)

Installation Instructions

Mobius Sconce 28-9450


B235

Page 3 of 6

Step 4 Align "L" holes and mount the other side of the shade panel (I) onto the two male end plastic buttons (J). Install two female end plastic buttons (K) and press firmly to snap into place. Clip excess length of the male button off after installing female plastic buttons.



Step 5 Repeat steps 2-4 for other flat shade panel (I).

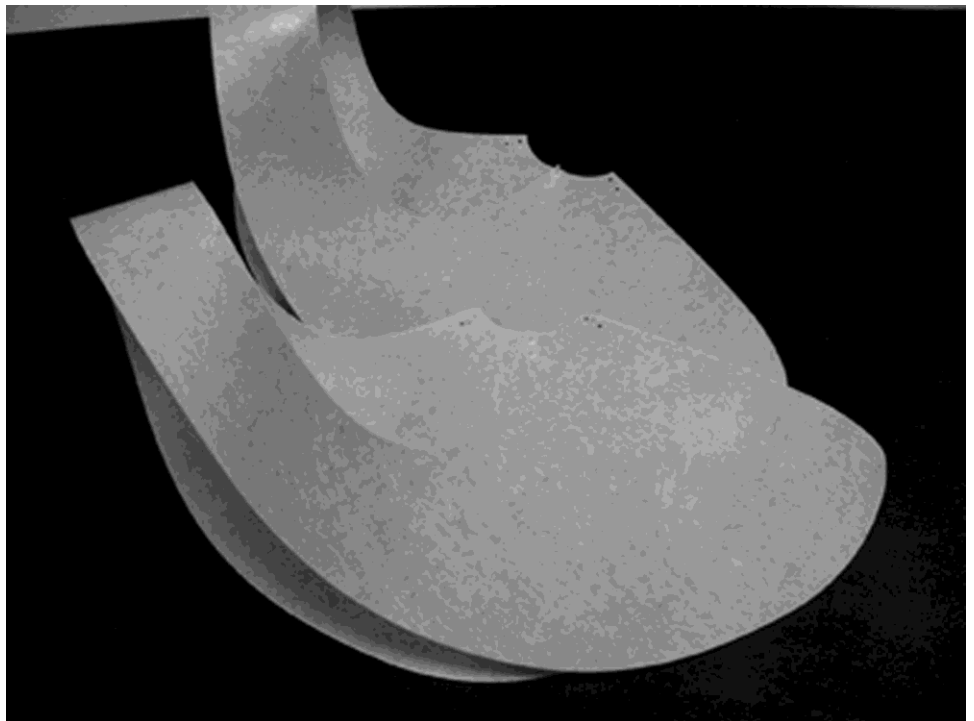

(continued)

Installation Instructions

Mobius Sconce 28-9450

B235


Page 4 of 6

Step 6 Slip male end plastic buttons (J) through the “C” side of the shade panel (I). *Note: Letter “C” should read the same as shown*). Align “C” holes and mount the other side of the shade panel (I) onto the two male end plastic buttons (J).



Step 7 Install two female end plastic buttons (K) and press firmly to snap into place. Clip excess length of the male button off after installing female plastic buttons.

Step 8 Fold the shade panel (I) as shown to match the “C” sides. Insert the other side of the shade panel (I) onto the two male end plastic buttons (J).

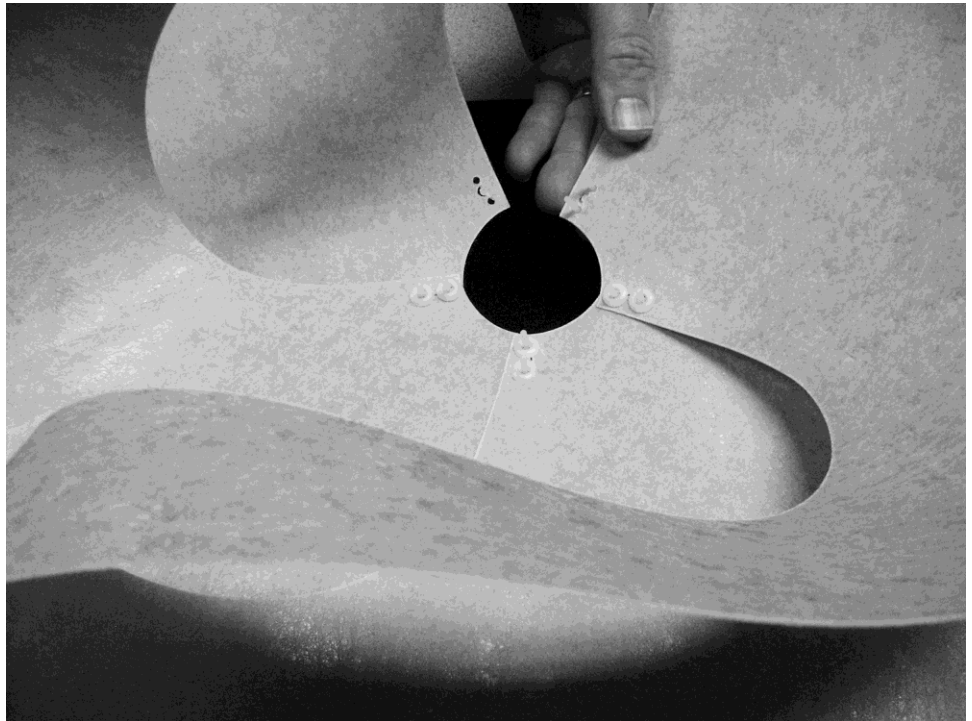

(continued)


Installation Instructions

Mobius Sconce 28-9450


B235

Page 5 of 6

Step 9 Install two female end plastic buttons (K) and press firmly to snap into place. Clip excess length of the male button off after installing female plastic buttons.

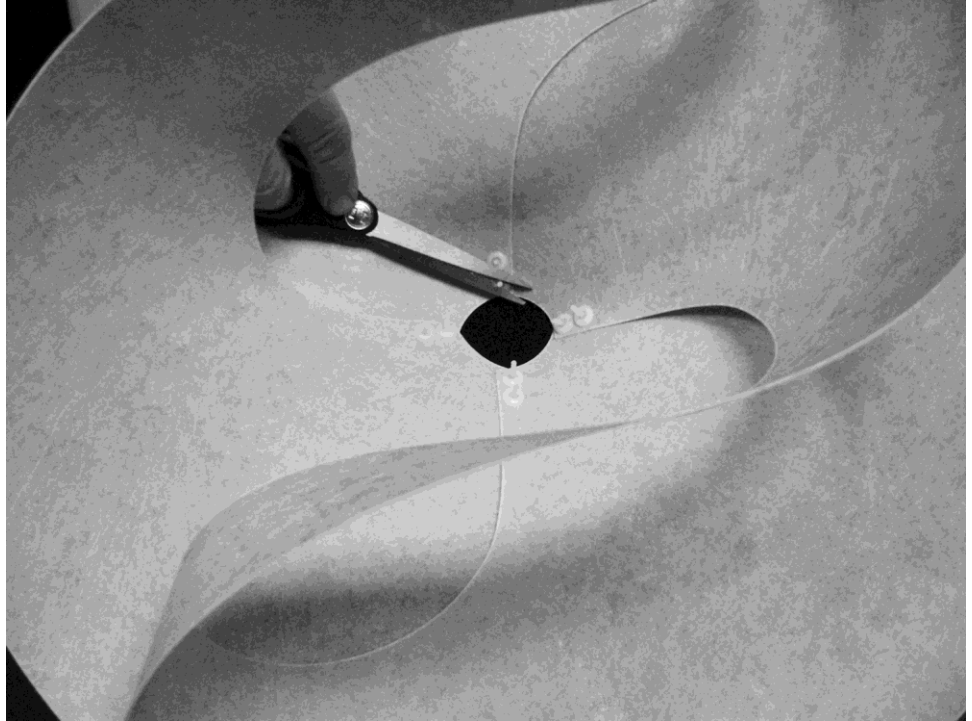

Bottom View of Assembled Shade

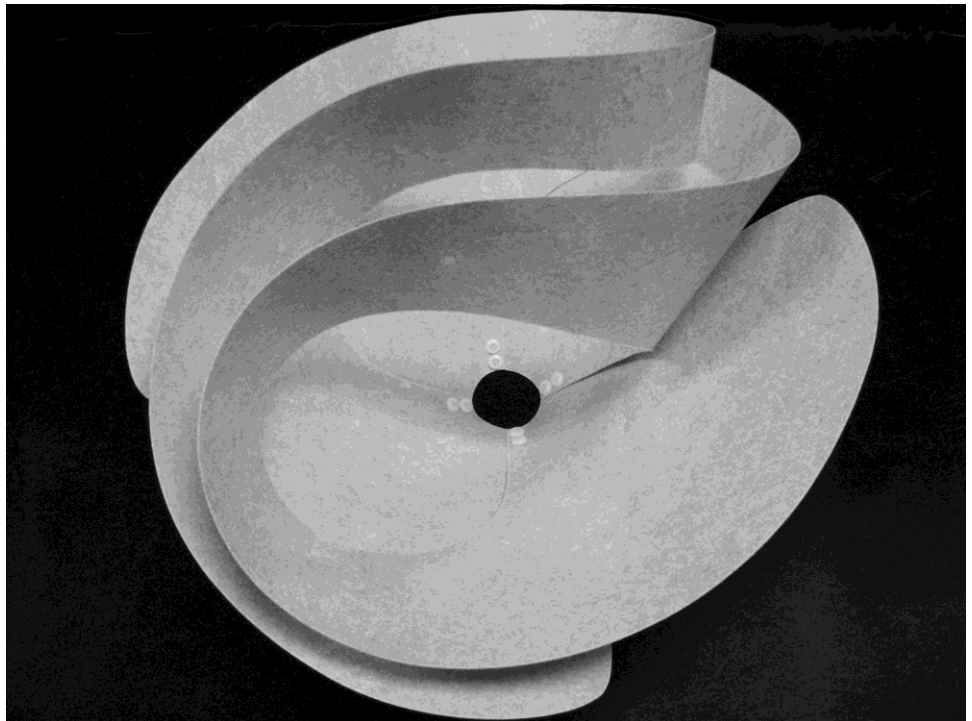

(continued)

Installation Instructions

Mobius Sconce 28-9450

B235


Page 6 of 6

To Install Flat Shade Option (Figure 2)

Component Parts

- L Socket
- M Shade Assembly
- N Forged Bar/Plate Assembly
- O Retaining Ring

1. Slip shade assembly (M) followed by forged bar/plate assembly (N) over socket (L).
2. Thread retaining ring (O) onto socket (L) and tighten until snug.
3. Install light bulb (*not included*).
4. Restore electricity at the main breaker.

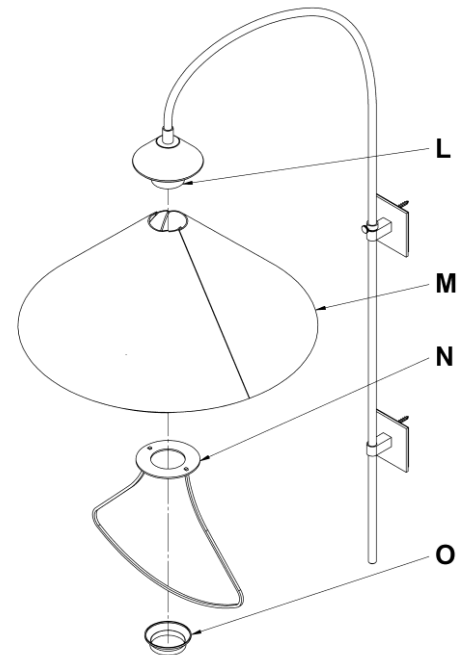


(Figure 2)

To Install Conic Shade Option (Figure 3)

Component Parts

- L Socket
- N Forged Bar/Plate Assembly (Optional)
- O Retaining Ring
- P Shade

1. Slip shade (P) followed by optional forged bar/plate assembly (N) over socket (L).
2. Thread retaining ring (O) onto socket (L) and tighten until snug.
3. Install light bulb (*not included*).
4. Restore electricity at the main breaker.

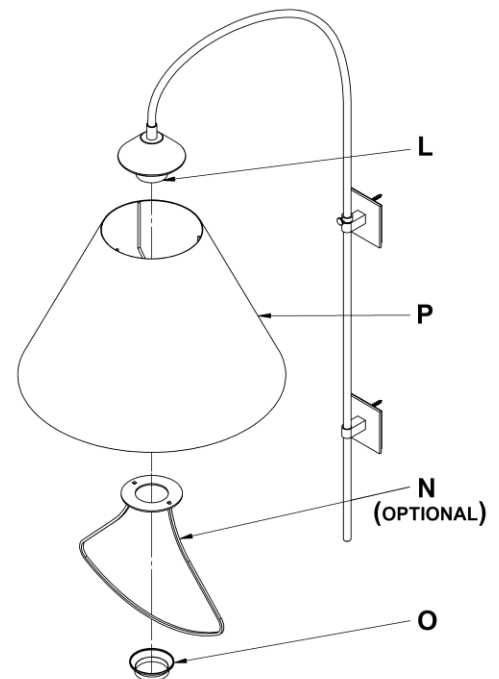

(Figure 3)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

HUBBARDTON FORGE®

Hand-Forged, Vermont-Made Lighting and Accessories
154 Route 30 South, Castleton, Vermont 05735

26937 Rev B